




1.

Place this template on the wall in the position the Router will be mounted. (It is recommended to mount the Router with the cable connections on the bottom).
2.

Mark the mounting holes and drill holes for the screws. (It is recommended to use #8 Pan Head or Flat Head Screws. See picture to the right.)
3.

Leave screws extended about 0.2 inches from the wall.
4.

Hang the Router on the screws.

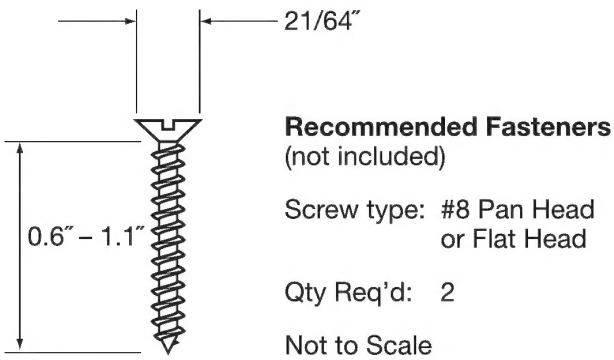

Not to Scale

